


- | | | | |
|-----------------|---|-----------------|-----------------------------|
| Chuck 1: | For bearing inner ring | Chuck 5: | For NSK PAX2-SU03 Cartridge |
| Chuck 2: | For high speed bearing | Chuck 6: | For NSK SX-MU03 |
| Chuck 3: | For NSK Pana Max Fron Bearings seat | Chuck 7: | For NSK SX-SU03 |
| Chuck 4: | For NSK NPA -Su03 Cartridge, Bien Air Bearing | Chuck 8: | For NSK T Series Cartridge |

Note: The chucks can be applied on any canister/cartridge when the size is similar matched

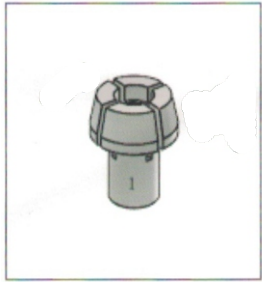

1.) Choose the right chuck (mostly chuck 2 for bearing)



2.) Mount the chuck



3.) Put the bearings inside the chuck



4.) Lock the chuck to hold the bearings tightly.



5.) Turn the pushing screw to push the spindle out of the bearings



6.) Unlock the bearings



7.) Turn the pushing screw again to push the bearing out of the chuck



8.) Use the tool to press the bearing on the rotor